


EcoFlow DELTA Pro Ultra

LCD Screen Icons

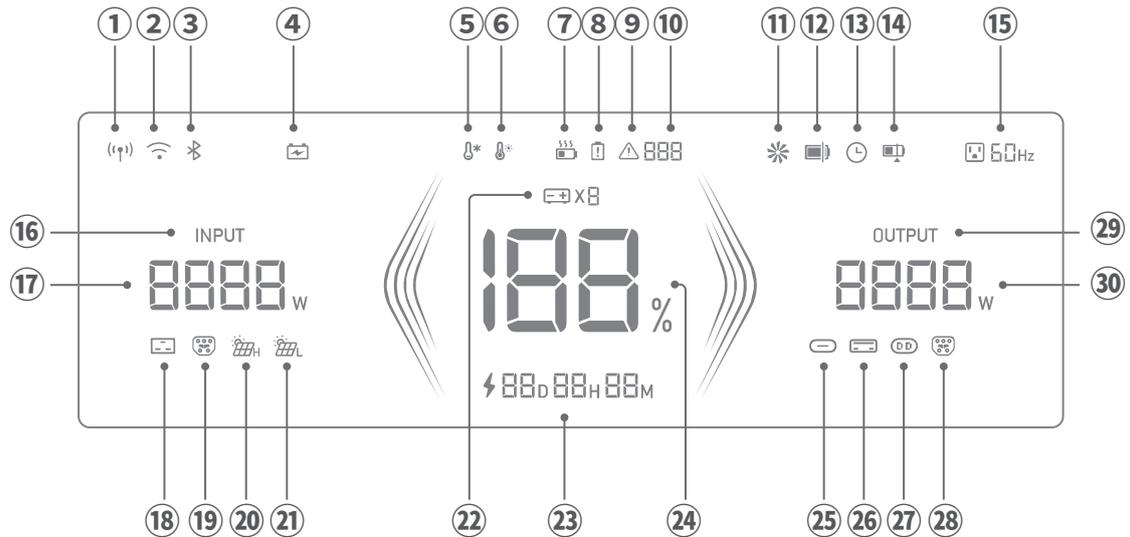

Number	Icon	State	Description
1		Solid	4G connected normally.
		Off	4G disconnected.
		Blinking	4G disconnected from the server.
2		Solid	WiFi connected normally.
		Off	WiFi disconnected.
		Blinking	WiFi disconnected from the server.
3		Solid	Bluetooth connected normally.
		Off	Bluetooth disconnected.
		Blinking	Blinks for 10 seconds when the product is unbound.
4		Solid	Energy management enabled.
		Off	Energy management disabled.
5		Blinking	Low-temp error.
6		Blinking	High-temp error.
7		Solid	Battery in the process of heating.
		Off	Battery not heated.

8		Blinking	Battery failure.
9 + 10		Solid	When there is an error, icon 12 shows up solid; you can check the Error Code List for details or ask after-sales service.
		Blinking	When there is an error, icon 11 shows up blinking.
11		Blinking	Ventilation fan failure.
12		Solid	Slow charging (max. power not set in the app) or charging limit.
		Off	Charging with full power.
13		Solid	There are scheduled tasks.
		Off	No scheduled task.
14		Solid	Shows up when charging or discharging levels are set in the app.
		Blinking	Battery level has reached the charging or discharging level.
15		Solid	AC output and frequency.
		Blinking	AC output error or inverter communication error.
16 + 17		Solid	Both icon 16 and 17 are shown on the LCD screen after the product is turned on.
22		Solid	Number of batteries currently connected.
23		Solid	Remaining charging time.
		Solid	Remaining discharging time.
24		Solid	Remaining battery percentage.
29 + 30		Solid	Both icon 29 and 30 are shown on the LCD screen after the product is turned on.

Notice

- DC output icon shows up on the LCD screen if DC power button is enabled after the product has been turned on.
- All the icons under "OUTPUT" (, ,) will only show up when output ports of the product are connected; these icons start to blink when there is a product failure.
- All the icons under "INPUT" (, , ,) will only show up when input ports of the product are connected; these icons start to blink when there is a product failure.
- The rotating speed of the ventilation fan icon depends on the gear.
- For more details about error codes, please visit the EcoFlow official website or contact EcoFlow customer service.
- Apparent Power: The LCD screen shows apparent power. Active power is the actual power that performs useful work, while apparent power is the total power, including both active and reactive power. (Reactive power is the power stored and released by capacitors and inductors, and it does not perform actual work.)